


GLOBAL OIL AND GAS SUPPLIES

Toll Free: 1-877-429-9832

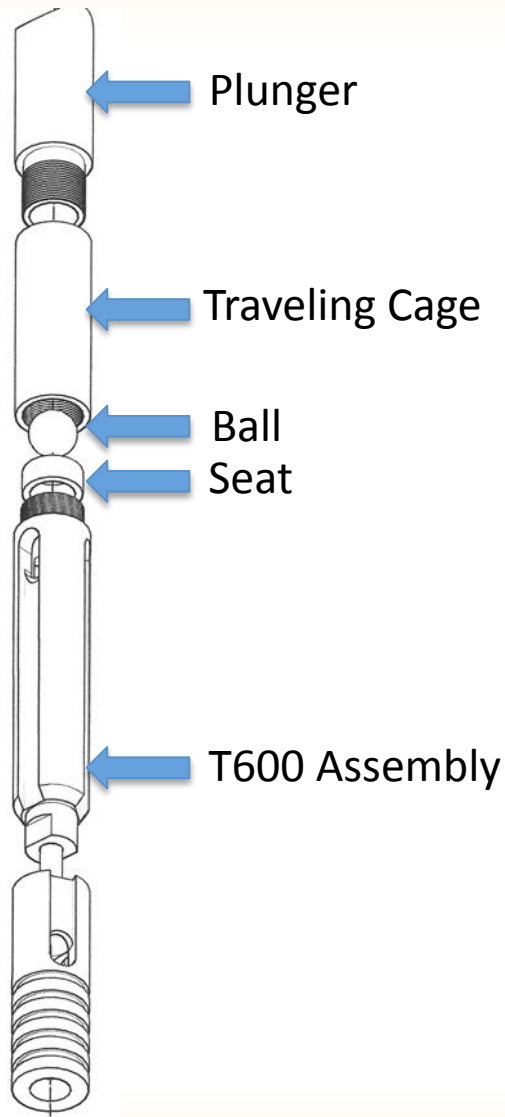

T600 Installation

The T600 can easily be installed on any stationary barrel pump with a single traveling valve. The T600 was designed to work with API parts. The seat plug is replaced with the T600 Assembly.

1. Install the T600 to the traveling cage after installing the ball and seat in to the traveling cage.
3. Tighten the T600 to the traveling cage, based on API Specifications.
4. When pump is assembled ensure stroke length is measured to assure pump stroke length is adequate.

Notes:

1. When Loctite 271 or equivalent is applied Use manufactures curing times.
2. Make sure if extension's are used the T600 is NOT allowed to stroke out of the barrel as this could cause damage.

THE T600 SUPERIOR GAS LOCKING SOLUTION